



LCD TV WALL MOUNT BRACKET, FIXED

Universal | 650100

Step 1. Press the mount on suitable wall place and use pencil to draw location of 4pcs drywall screws.

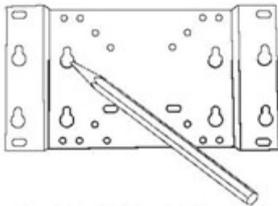


For VESA 200 x 100mm

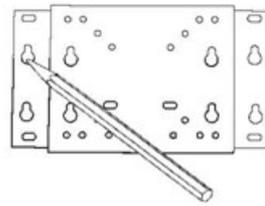


For VESA 50 x 50, 75 x 75, 100 x 100mm


Step 2. Put the mount down, use tools to fix 4pcs drywall screws on the drawn locations, and make sure it is steady.

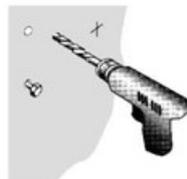

Step 3. Install your LCD TV into suitable VESA hole of the mount and hand it up to the fixed drywall screws. Move it downwards and make sure it is well fixed.

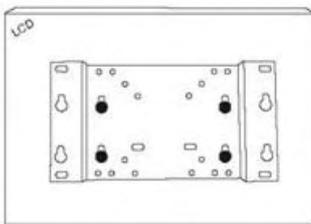


For VESA 200 x 100mm

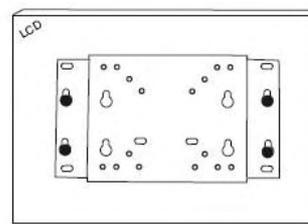


For VESA 50 x 50, 75 x 75, 100 x 100mm

Note: VESA Mount Standards:

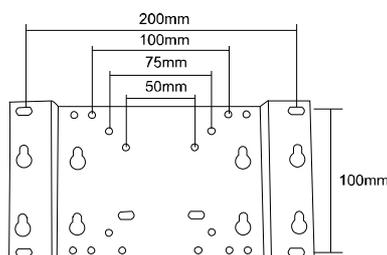


LCD TV Wandhalterung, fix Universal | 650100

Schritt 1. Bitte halten Sie die Halterung an eine geeignete Stelle an der Wand und markieren mit einem Bleistift die 4 Bohrlöcher.

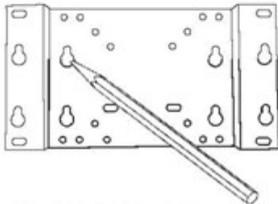


Für VESA 200 x 100mm

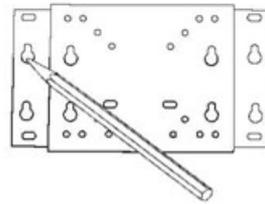


Für VESA 50 x 50, 75 x 75, 100 x 100mm


Schritt 2. Nehmen Sie die Halterung nun wieder ab und bohren Sie Löcher an den zuvor markierten Stellen. Setzen Sie nun die Dübel in die Löcher ein und drehen die Schrauben ein. Vergewissern Sie sich das die Schrauben sicher befestigt sind.

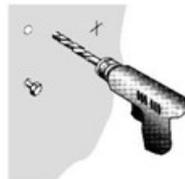

Schritt 3. Befestigen Sie Ihren LCD TV an den passenden Löchern der Halterung. Nun hängen Sie Ihren LCD TV an die bereits zuvor befestigten Schrauben an die Wand. Drücken Sie Ihren LCD TV herunter bis es sicher einrastet und vergewissern Sie sich nochmals das alles gut befestigt ist.

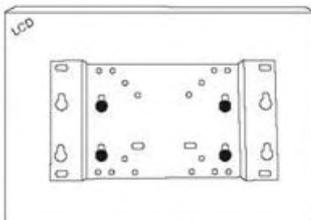

Für VESA 200 x 100mm

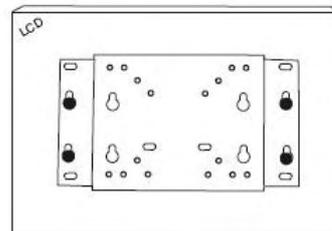

Für VESA 50 x 50, 75 x 75, 100 x 100mm

Hinweis: VESA Standards:

